



Instructions For **DOME**[®]

Dome™ Box Includes:

(1) 10' Dome™ Frame, (1) Recreational Grade Top, (1) 4-Piece Spike Kit and (1) Wide-Trax™ Roller Bag

ONE-TIME TOP INSTALLATION

Unpack and Open

1. Place your E-Z UP[®] Frame in the center of the area to be sheltered.
2. With a partner on the opposite side of the Frame, grasp two outer legs, lift the Frame slightly off the ground, and step backward while pulling the Frame to open.
3. Stop when the Frame is approximately $\frac{3}{4}$ of its fully-opened size. (Fig A)
4. Set the Frame back on the ground.

Attach Fabric Top

5. Gently unfold the Fabric Top, and place it over the semi-opened Frame.
6. Attach the Fabric Top to the E-Z UP[®] Frame by matching the Hook and Loop Strips on the inside of the Fabric Top corners with the Hook and Loop Strips on each Frame corner. (Fig B)
7. Pull the Fabric Top down over the Frame corners — pushing the Hook and Loop Strips firmly together.

SET UP

Open E-Z UP[®] Shelter

1. With a partner on the opposite side, grasp the bottom of the diamond-shaped area of Outer Trusses near the “OPEN HERE” sticker. (Fig C)
2. Lift the Frame up slightly and step backward until the shelter is almost fully opened. Gently shake the shelter while opening. **Be careful not to pinch fingers!**




Secure Auto-Slider[®] Pull Pin

3. Fold up the Fabric Top corner to expose the Auto-Slider[®] Pull Pin. (Fig D)
4. Lift shelter corner slightly off the ground and engage the Auto-Slider[®] Pull Pin by pushing up on the Frame side trusses with one hand while holding down the top of the Frame Leg with the other hand. The pins will auto-engage when aligned with the holes on the Frame Legs.
5. After the Auto-Slider[®] Pull Pin has locked into place, pull the Fabric Top down over the Frame Leg, making sure to align and secure the hook and loop strips on the Fabric Top to the Frame.
6. Repeat on all remaining corners.

Extend Frame Legs

7. With a partner, lift the two adjacent outer legs up off the ground simultaneously to about waist height.
8. Slide the lower/inner legs out until the Leg Adjustment Toggle buttons lock at selected height on each leg. (Fig E)
Note: There are 2 adjustment settings on each leg.
9. Repeat on the remaining legs.
Note: It is recommended that you use genuine E-Z UP[®] Deluxe Weight Bags and/or Heavy-Duty Stake Kits to secure your shelter.

Your E-Z UP[®] shelter setup is now complete!

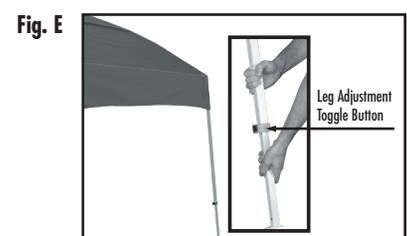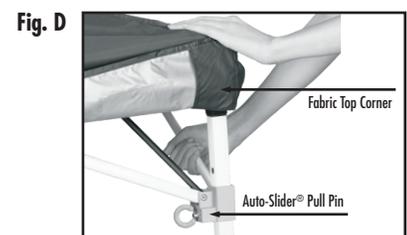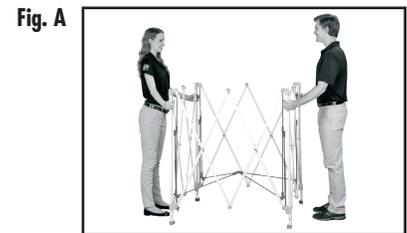



Instructions For **DOME**

TAKEDOWN

Collapse Shelter Legs

1. With a partner, slightly lift two adjacent corner legs simultaneously.
2. Depress the **Toggle Button** and slide lower/inner legs into upper/outer legs, making sure to do two legs at a time on the same side. (Fig A)
3. Repeat on remaining legs.

Note: Keep the toggle button depressed while retracting leg.

Release Auto-Slider® Pull Pin

4. With one hand, slightly push up on the truss near the **Auto-Slider® Pull Pin** to relieve pressure. (Fig B)
5. With the other hand, release the **Auto-Slider® Pull Pin** by pulling the ring.
6. Repeat on remaining legs.

Closing Shelter

7. Grasp the **Frame** on the top of the diamond-shaped area of **Center Trusses** on the opposite sides near the "CLOSE HERE" sticker. (Fig C)
8. Lift the shelter up slightly, and shake it while stepping toward your partner until the shelter is approximately ¾ closed.
Be careful not to pinch fingers!
9. Grasp the two outer legs, and push the frame together until it is fully closed.
10. Store the shelter in the roller bag provided.

Note: Hug your shelter before placing it in the cover bag.

ROLLER BAG

One-Time Assembly

Use the Roller Bag to store and transport your Instant Shelter® and Spike Kit.

1. Slide **Axle** through **Roller Bag Receiver**. (Fig. D)
2. Slide one **Wheel** onto each side of the **Axle**.
3. Push **Snap Clip** over **Wheel Axle** end (against **Wheel**). (Fig. E)

Your Roller Bag is ready to use!

CARE AND MAINTENANCE

For long lasting durability and the best possible protection for your E-Z UP® Instant Shelter® products, follow these E-Z care and maintenance instructions:

- Use a mild soap (not detergent) and plenty of water for top cleaning.
- Let the E-Z UP® top and frame dry completely before closing or storing to avoid mildew.
- Frame will operate and look better if occasionally wiped with silicone spray, especially before and after use in damp conditions. Remove excess silicone residue before applying top.
- Use a seam sealer if top leaks or drips water. Available at most sporting goods and hardware stores.
- Slightly tighten bolts if frame becomes loose.

Replacement Parts

For all shelter sizes: Call 800-45-SHADE or go to ezup.com/parts

WARNING: Keep all flame and heat sources away from all shelter fabrics. These fabrics meet the flammability requirements of CPAI-84. The fabric may burn if left in continuous contact with any flame source. The application of any foreign substance to the fabric may render the flame-resistant properties ineffective.

