

Instructions for Graphic Sail

WHAT'S IN THE BOX

Your Graphic Sail Includes: (1) Graphic Sail, (1) Carry Bag

SET UP

NOTE: This accessory is intended to be installed in the corner under the primary fabric canopy of your E-Z UP® shelter.

- Set up your E-Z UP® shelter product in the area that you intend to shade according
 to the owner's manual instructions. Open the frame to approximately 3/4 of its
 fully-opened size and do not extend legs.
- **2.** Remove Graphic Sail from storage bag. Select desired corner of shelter to begin install. Remove fabric top corner in order to start.
- **3.** Locate the **Peak Pole Attachment Points** on the shelter (Fig. A) and the **FXT Clip** on the top of the Graphic Sail. (Fig. B)
- 4. While holding the Graphic Sail's top FXT Clip, pull down the Peak Pole to easily reach the peak pole attachment, connect the FXT Clip to the peak FXT Peak Pole Attachment Point. (Fig. C)
- Starting on the right side, locate the Graphic Sail's FXT Clip and attach to the Frame Attachment Point on the frame of the shelter. (Fig. D)
- **6.** Continue to the left side, locate the Graphic Sail's **FXT Clip** and attach to the **Frame Attachment Point** on the frame of the shelter. (Fig. E)
- Continue and locate the Graphic Sail's bottom FXT Clip and attach to the Corner Frame Attachment Point on the frame of the shelter. (Fig. F)
- **8.** Finally, relocate the fabric top corner and fully set up the shelter according to the owner's manual instructions.

TAKE DOWN

1. Repeat above steps in reverse.

CARE & MAINTENANCE

- Use a mild soap (not detergent) and plenty of water for cleaning.
 Let the E-Z UP® Graphic Sail dry completely before closing or storing to avoid mildew.
- Store in the Carry Bag provided.











