

Instructions for SPECTATOR



WHAT'S IN THE BOX

Your Spectator™ shelter includes: (1) Frame, (1) Upper Peak Fabric, (1) Lower Peak Fabric, (1) Stake Kit, (1) Roller Bag

SET UP

CAUTION: Avoid pinch points when opening and closing the shelter frame.

- 1. With two people standing at diagonal corners of the structure, hold the leg and pull out to unfold frame. Do not unfold frame completely. This will allow easier fit for draping shelter top over frame. (Fig. A)
- 2. Extend Lower Frame Pole until it clicks into place. (Fig. B)
- Drape the Upper Peak and Lower Peak top over frame. Insert the Upper and Lower Frame Poles into Valance Pockets found at the shelter corners. (Fig. C)
- **4.** Pull up sliding bracket located on upper portion of leg until **Push Button** snaps into place. This will ensure top of frame is fully extended. (Fig. D)
- **5.** Secure shelter top to frame with **Hook and Loop Straps**. (Fig. E)
- **6.** Adjust desired height until **Push Button** locks into place, making sure all four poles are level. (Fig. F)
- **7.** Secure shelter by inserting a spike through the **Foot Pad Hole** and driving the spike firmly into the ground. (Fig. G)

TAKE DOWN

Once Fabric Top is installed, it may remain on shelter when stored. Repeat set up steps in reverse.

CARE & MAINTENANCE

- Use a mild soap (not detergent) and plenty of water for cleaning.
 Let the fabric dry completely before closing or storing to avoid mildew.
- Store in the Roller Bag provided.

