

Outer Leg

Inner Leg

Aero-Dome™ Replacement Parts

ORIGINALS	Part Description	Part Number	Price Each
	Replacement Top	ADT1742GR	\$ 59.95
	Replacement Frame	SDF007474	79.95
	Trusses	11SDPTR1521TC	7.50
	Outer Leg	11SDP0L1475	14.50
	Inner Leg	11SDPIL1476	15.50
Center Cap	Leg Slider	DMPLS0000	4.50
	Flex Rod Clips	INPPC1598B	.55
	Truss Washer	INPWS0000B	.20
	Top Attachment Hook	INPTH0000	2.00
	Flex Rod w/ Center Cap	11SDPTP1519	12.50
	Flex Rod w/o Center Cap	11SDPTP1520	10.00
	Carry Bag - Green	SDACB1561GR	9.95
	Stakes - Set of 4	INASK1000	6.99
x Rod Clip	All Prices Subject to	Change Without No	tice
Trusses — Flex Rods			Leg Cap Leg Slider

ASK ABOUT OUR OTHER E-Z UP® INSTANT PRODUCTS™

Truss Washers

Customer Service Hot Line

(800) 235-5637



PRODUCT

WARRANTY

INTERNATIONAL E-Z UP, INC. manufacturer of the E-Z UP* Instant Shelter* warrants to the original retail purchaser who has properly completed and returned the enclosed warranty registration cardeach part of the E-Z UP* Instant Shelter* to be free from defects in material or workmanship for a period of one year after the date of original purchase. This warranty applies only for normal and expected uses, as determined by the manufacturer. INTERNATIONAL E-Z UP, INC.'s obligation and liability under this warranty is limited to the repair or replacement (at its option) of the product or its parts, after its own review and examination.

RETURN ADVISORY - Before returning any part or product to INTERNATIONAL E-Z UP, INC. or its designated representative, please phone or write to obtain specific return shipping instructions. All shipping costs must be prepaid, and INTERNATIONAL E-Z UP, INC. is not responsible for products damaged in transit.

CONDITIONS - This warranty shall be void as to any product which has been altered or modified in any manner. This warranty does not apply to damages caused by wind, rain, or other forces of nature, not to accidental or deliberated damage of the product, nor to use of the product that does not conform with the product instructions.

This express warranty is provided in lieu of all other warranties, expressed or implied.

We Make Life E-Z!™ INTERNATIONAL E-Z UP, INC.

1650 Iowa Avenue, Suite 200, Riverside, California 92507 (909) 426-0060 • Fax (909) 426-0063

> www.ezup.com Customer Service Hot Line

800-SHADE ME

E-Z UP® INSTANT SHELTER®



"Sets Up in Seconds!™"

AERO-DOME"

Take time to learn what to do to provide years of durable and safe use from your E-Z UP® Instant Shelter®. After reading these instructions carefully, if you have any need of assistance, call



Customer Service Hot Line (800) 235-5637

What's In The Box

Please read each step before you attempt to set up. Save these instructions for future reference. Return the Warranty Card within 10 days of purchase.

- 1 Aero-Dome™ Frame Fully Assembled
- 1 Carry Bag
- 1 Aero-Dome [™] Top (with attachment hooks)
- 4 Piece Stake Kit

How To Set Up

Important: The first time you set up your Aero-Dome[™], the top must be hooked onto the frame. After performing Step 1 below, unfold the Aero-Dome[™] top and drape over partially opened frame. Locate the attachment hook on each corner of the Aero-Dome[™] top and clip into the hole located on frame just below corner caps on each lea (See Illustration below). Continue with steps 2-7.



 


1. Place E-Z UP® in center of area to be sheltered. Remove cover bag. With partner on opposite side, grasp two outer legs, slightly lift off ground and step backwards, stopping at full arms' length.



2. Grasp the top and bottom of diamondshaped area of trusses. Slightly lift shelter up and push hands together while stepping backwards until shelter is fully opened.


Be careful not to pinch fingers or pull backwards too hard as trusses will bend.



3. Engage auto slider at each corner by pushing up on slider with one hand while pushing down on top of leg with other hand. Snap button will engage in hole. Repeat step on remaining leas.



5a. Before adjusting other legs; stand under shelter and locate flex rod sets clipped to inside of trusses. Remove flex rod sets from clips. Lengthen flex rod by connecting rods at center metal divider.

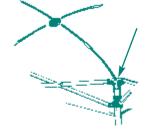

5b. Firmly insert end of flex rod that is attached to frame in plastic corner bracket holes. Upon insertion, all four rods should point at each other.

4. Lift two adjacent outer leas

and pull out inner legs until snap

button locks.



6. Locate flex rod with center hub attached to end. Connect other three flex rods into center hub. Be sure all flex rods are fully inserted into both the center hub and the corner plastic leg caps.



7. Lift up the remaining two outer legs and pull out inner legs until snap button locks. Use stakes to secure in windy conditions.





1. With a partner, lift adjacent outer legs slightly, depress snap button and telescope inner legs into outer legs.



2. Before adjusting other legs, detach three flex rods from the center hub, remembering one rod remains attached to hub. Pull out rods from corner bracket holes.

Disconnect each rod set at center metal divider, fold flex rod in half, and clip free end of rod into retaining clips located on the trusses.



3. Lower remaining legs.



4. Release auto slider at all four corners by slightly lifting up on slider with one hand while depressing snap button with other hand. Once snap button is depressed, push slider down past snap button.



5. With partner on opposite side, grasp top and bottom of diamond-shaped area of trusses and slightly lift up. Shake shelter a little, pulling hands apart, while stepping towards partner until shelter is 3/4 closed.



6. Grasp adjacent outer legs and push shelter together until fully closed. Be careful not to pinch fingers! Do not push hard. Put cover bag over shelter.

Important Information

IMPORTANT! Read this information before proceeding. It is the user's responsibility to take the following precautions at all times.

- Use caution when handling the E-Z UP® folding frame. Avoid pinching hands or fingers as frame opens or closes.
- Always stake or weight down your E-Z UP®. Do not use in any potentially windy or rainy weather. Wind and rain can damage the E-Z UP® Aero-Dome™ and may also result in injury to you or others. Therefore, do not rely on shelter for protection in heavy or prolonged rain storms.
- Do not use shelter in a lightning storm.
- The E-Z UP $^{\otimes}$ Aero-Dome $^{\top}$ is designed as a temporary shelter. Do not leave up for extended periods.
- Do not leave your E-Z UP® Aero-Dome™ unattended.
- Keep all flame and heat sources away from top fabric. Do not build fires within shelter enclosure.

Fire retardant - meets CPAI-84 requirements.

Care and Maintenance

For long lasting durability and the best possible protection for your E-Z UP® Aero-Dome™, follow these E-Z care and maintenance instructions:

- Use a mild soap (not detergent) and plenty of water for top cleaning.
- \bullet Let the E-Z UP $^{\otimes}$ top and frame dry completely before closing or storing to avoid mildew.
- Frame will operate and look better if occasionally wiped with silicone spray, especially before and after use in damp conditions. Remove excess silicone residue before applying top.
- Use a seam sealer if top leaks or drips water. Available at most hardware and sporting goods stores.
- Slightly tighten bolts if frame becomes loose.

Customer Service Hot Line (800) 235-5637