# IMPORTANT INFORMATION

IMPORTANT! Read this information before proceeding. It is the user's responsibility to take the following precautions at all times.

- Always stake or weight down your E-Z UP® shelter. Do not use in any
  potentially windy or rainy weather. Wind and rain can damage your E-Z
  UP® shelter and may also result in injury to you or others. Therefore, do
  not rely on shelter for protection in heavy or prolonged rain storms.
- The E-Z UP® shelter is designed as a temporary sun shelter. Do not leave up for extended periods.
- Use caution when handling the E-Z UP® frame. Avoid pinching hands or fingers as frame opens or closes.
- Do not use shelter in a lightning storm.
- Do not leave your E-Z UP® Instant Shelter® product unattended.
- Do not build fires under shelter.

**WARNING:** Keep all flame and heat sources away from the top, awning and sidewall fabrics. These fabrics meet the flammability requirements of CPAI-84. The fabric may burn if left in continuous contact with any flame source. The application of any foreign substance to the fabric may render the flame-resistant properties ineffective.

# CARE AND MAINTENANCE

For long lasting durability and the best possible protection for your E-Z UP® Instant Shelter® product, follow these E-Z care and maintenance instructions:

- Use a mild soap (not detergent) and plenty of water for top cleaning.
- Let the E-Z UP® top and frame dry completely before closing or storing to avoid mildew.
- Frame will operate and look better if occasionally wiped with silicone spray, especially before and after use in damp conditions. Remove excess silicone residue before attaching top.
- Use a seam sealer if top leaks or drips water. Available at most sporting goods and hardware stores.
- Slightly tighten bolts if frame becomes loose.

For online warranty, service, parts and accessories as E-Z as 1-2-click, contact us at

www.ezupdfreet.com

Ask about our other E-Z UP® Instant Products™



### 2 YEAR LIMITED WARRANTY

INTERNATIONAL E-Z UP, INC., manufacturer of the E-Z UP® Instant Shelter® product, warrants to the original purchaser who provides a dated sales receipt from an Authorized Dealer, each part of the E-Z UP® shelter to be free from defects in material or workmanship for a period of two years after the date of original purchase. The E-Z UP® Instant Shelter® frame is covered under a limited two year warranty and guarantees the frame to be free from defects in material or workmanship. This warranty applies only for normal and expected uses, as determined by the manufacturer.

INTERNATIONAL E-Z UP, INC.'s obligation and liability under this warranty is limited to the repair or replacement (at its option) of the product or its parts, after its own review and examination.

RETURN ADVISORY - Before returning any part or product to INTERNATIONAL E-Z UP, INC. or its designated representative, please phone or write to obtain specific return shipping instructions. All shipping costs must be prepaid, and INTERNATIONAL E-Z UP, INC. is not responsible for products damaged in transit.

CONDITIONS - This warranty shall be void as to any product which has been altered or modified in any manner. This warranty does not apply to damages caused by wind, rain, or other forces of nature, not to accidental or deliberate damage of the product, nor to use of the product that does not conform with the product instructions.

This warranty is provided in lieu of all other warranties, expressed or implied.

# We Make Life E-Z!™ INTERNATIONAL E-Z UP, INC.

1601 lowa Avenue, Riverside, California 92507 (909) 426-0060 • Fax (909) 426-0063 www.ezupdirect.com

**Customer Service Hot Line** 

1 (800) SHADE ME

# E-Z UP INSTANT SHELTER PRODUCT

# "Sets Up in Seconds<sup>™</sup>!"

# Pagoda

 $13^{\text{ft}} \times 13^{\text{ft}}$  (4.0m x 4.0m)

Take time to learn how to provide years of durable and safe use from your E-Z UP® Instant Shelter®product. After reading these instructions carefully, if you have any need of assistance, call our Customer Service Department.



Customer Service Hot Line
1 (800) SHADE ME
7 4 2 3 3 6 3
www.ezupdirect.com

- Pagoda<sup>™</sup> Frame
- Two-Tone Polyester Top
- Roller Bag
- 4 Piece Stake Kit

# FIRST TIME TOP ATTACHMENT

Please read each step before you attempt to set up. Save these instructions for future reference.



1 • Place your Pagoda™ frame in the center of area to be shaded. With partner, grasp two outer legs, slightly lift off the ground, and step backwards, stopping at full arms' length.




2. Spread the Top Vent Fabric over the peak section and slide the 4 fabric corners over the 4 Vent Fingers.



**3.** Expand the frame to approx. 2/3 open. Spread the larger fabric over the frame, tuck the fabric under the Top Vent Fabric Fingers and using the hook and loop strips, secure the top to the trusses at 8 different points.



4. Attach the larger fabric to the frame by matching hook and loop attachment straps on the top with the hook and loop strips on the frame. Push firmly together at each corner

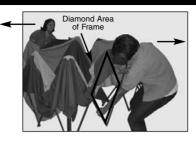

• With partner on opposite side of shelter, grasp the top and bottom of the diamond shaped area of truss on opposite sides. Lift up and step backward until shelter is 3/4 opened, being careful not to pinch fingers. Expand frame to fully open. MAKE SURE THE VENT FINGERS ARE RELEASED OVER LARGE FABRIC.



2. To engage Pull Pin Slider at each corner, first lift the fabric off of the slider, then with one hand hold the top of the leg while pushing up on the slider with the hand. The Pull Pin will engage the hole. Repeat on all four corners.

**3.** A) Insert extension rods in the top of the legs. B) Secure corner fabric to the leg by inserting the 2 clips into the small holes at the top of each leg. C) Finally, pull the fabric out over the end of the extension rods and secure using the sewn pockets. Repeat on all four corners.



4. Lift outer legs up and slide out the inner legs until the snap button locks into the outer leg. Repeat on the opposite legs.










**1.** With partner, slightly lift up two adjacent outer legs, depress snap button and telescope inner legs into outer legs. Repeat on the opposite legs.

2. Now, with the shelter in lowered position, remove extension rods. A) Pull the fabric back out from the sewn pockets to gain access to extension rods. B) Remove fabric by releasing the 2 clips from the small holes at the top of each leg. C) Carefully slide extension rods out from the top of the legs. Repeat on all four corners.



3. Release Pull Pin at each corner by first lifting valance fabric away from slider. With one hand push up on truss near the Pull Pin, pull the pin out to release. NOTE: It is much easier to release Pull Pin when the shelter weight has been removed from the Pull Pin.

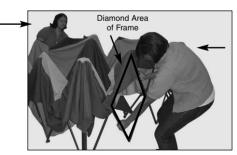

**3.** Grasp the top and bottom of diamond shaped truss by the close labels. Lift the shelter up slightly and shake it while stepping towards your partner until the unit is 3/4 closed. With each partner grasping two outer legs, push frame together to fully close it. **Be careful not to pinch fingers!** Store shelter in roller bag.