


3b. Grasp Sky Banner™ leg and rotate it toward the crossbar until leg and crossbar are parallel. Repeat on other leg.



4. Gently fold Sky Banner™ in half, aligning legs and crossbars on top of each other.

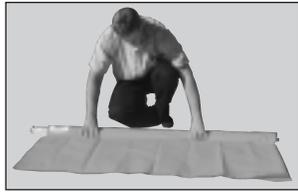

5. Roll up legs and crossbars in banner and place in protective carry bag until next use.

NOTE: Sliders may be removed from the shelter at this time.

Remove sliders by lifting the metal locking-pin and opening slider jaws.

Important Information and Maintenance

IMPORTANT! Read this information before proceeding. It is the user's responsibility to take the following precautions at all times.

- Use caution when handling the folding frame.

For long lasting durability and the best possible protection for your E-Z UP®, follow these E-Z care and maintenance instructions:

- Frame will operate better if sliding portion of legs are occasionally cleaned and lubricated with silicone spray. Remove excess silicone residue with soft cloth.
- Sky Banner™ fabric can be cleaned with soapy water or gentle cleaner.

For online warranty, service, parts and accessories as E-Z as 1-2-click, contact us at

www.ezup.com

Ask about our other E-Z UP® Instant Products™

Covered under one or more of the following patents: 4,607,656; 4,924,896; 5,244,001; 5,421,356; 5,485,863; 5,490,533; 5,511,572; 5,632,292; 5,632,293; 5,794,546; 5,797,412; 5,813,425; 5,865,127; 5,921,260; 5,934,301; 6,041,800; 6,070,604; 6,076,312; 6,129,102; 6,138,702; 6,192,910; 6,230,729; 6,240,940; 6,361,057; 6,363,956; 6,374,842; 6,382,224; 6,397,872; 6,412,507; 6,431,193; 6,439,251; 6,470,902; 6,502,597; 6,520,196; 6,601,599; 95704390; 94/2354; 91461; 132167; 95/0693; 95/6140; 95/6141; 84107895; 684,978; 2123096; 190486; 289754; 215344; 701077; 2128935; 2949648; 48648; DE 695 10 919 T2; WO96/03561. International Design Registration No. DM/009515 Benelux Design Registration No. 16959-04. Other US and foreign patents pending. © Copyright 2004 International E-Z UP, Inc. USA. All rights reserved. 0008-0604



PRODUCT

WARRANTY

INTERNATIONAL E-Z UP, INC., manufacturer of the E-Z UP® product warrants to the original purchaser who provides a dated sales receipt, each part of the E-Z UP® Sky Banner™ to be free from defects in material or workmanship for a period of one year after the date of original purchase. This warranty applies only for normal and expected uses, as determined by the manufacturer. INTERNATIONAL E-Z UP, INC.'s obligation and liability under this warranty is limited to the repair or replacement (at its option) of the product or its parts, after its own review and examination.

RETURN ADVISORY - Before returning any part or product to INTERNATIONAL E-Z UP, INC. or its designated representative, please phone or write to obtain specific return shipping instructions. All shipping costs must be prepaid, and INTERNATIONAL E-Z UP, INC. is not responsible for products damaged in transit.

CONDITIONS - This warranty shall be void as to any product which has been altered or modified in any manner. This warranty does not apply to damages caused by wind, rain, or other forces of nature, not to accidental or deliberated damage of the product, nor to use of the product that does not conform with the product instructions.

This warranty is provided in lieu of all other warranties, expressed or implied.

We Make Life E-ZI!™

INTERNATIONAL E-Z UP, INC.

1601 Iowa Avenue, Riverside, California 92507

(909) 781-0843 • Fax (909) 781-0586

www.ezup.com

Toll-Free Sales

800-45 SHADE

7 4 2 3 3 6 3

OWNER'S MANUAL

E-Z UP® INSTANT SHELTER®



"Sets Up In Seconds!"™



Take time to learn what to do to provide years of durable and safe use from your E-Z UP® Sky Banner™. After reading these instructions carefully, if you have any need of assistance call our Customer Service Department.



Customer Service Hot Line

800-SHADE ME

7 4 2 3 3 6 3

www.ezup.com

What's In The Box

Please read each step before you attempt to set up. Save these instructions for future reference.

- 1 Sky Banner™ Frame
- 2 Quick Attachment Leg Straps
- 2 Slider Connectors
- 1 Carry Bag
- 2 Sliders

How To Set Up

Important: Always use a partner to set up your E-Z UP® Instant Shelter® and Sky Banner™ to prevent damage to the frame.



Slider Adapter



1. The Sky Banner™ is designed to fit on many different E-Z UP® Instant Shelter® models. Depending on which model shelter you own, you may need to install one of the slider adapter by opening the jaws of the slider and inserting the center plug of the slider adapter into the hole in the corner of the slider jaw. Press firmly in place.


Note: Use the thin Express™ III slider adapter for Express™ II, and Enterprise™ II frame models. Eclipse™, Hut™, and Bungalow™ frames do not require slider adapters.

2. Open the slider by lifting lock-pin and opening jaws. Enclose the leg in the slider by closing the jaws. Make sure one set of docking tabs point outside of shelter and that ramped snap button guides are on top facing up. Slide locking-pin down into place.

3. When the slider is properly attached to the shelter, it will rest on top of the snap button.

Ramped snap button guides facing up (2 per set)


Slider

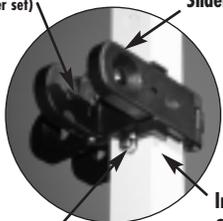

Snap Button

Instant Shelter® Outer Leg

Fitting Fabric To Sky Banner™ Frame

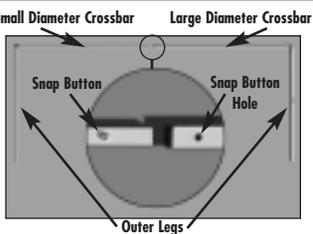


1. Disconnect center telescoping crossbars by depressing snap button and sliding large and small diameter crossbars apart.





Sky Banner™ Outer Leg

Ramped snap button guides facing up (2 per set)

3. Snap the end of each outer leg of the Sky Banner™ down into a slider by positioning both exposed snap buttons over the ramped snap button guides. Push down to engage buttons.

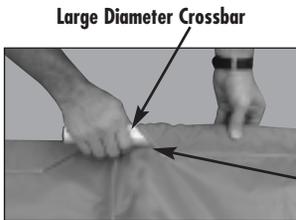

Large Diameter Crossbar

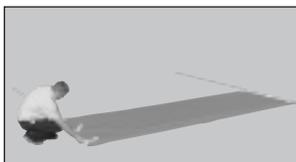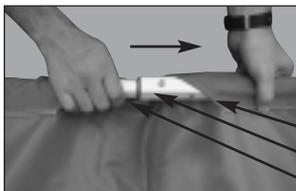

2. Lay Sky Banner™ fabric flat with sleeve facing up. Insert exposed end of each crossbar section into sleeve, starting with the outside edge and moving towards the opening in the center of the sleeve.

Opening at Center of Sleeve


3. With both large and small diameter crossbars inserted into sleeve, join the two by sliding one end into the other until snap button engages.

Opening at Center of Sleeve
Large Diameter Crossbar
Small Diameter Crossbar


4. While grasping ends of large and small diameter crossbar section, extend outer legs until snap buttons on each engages.

5. Secure fabric to Sky Banner™ Frame by pressing together quick attachment straps located on outer edges of banner.


Attach Sky Banner™

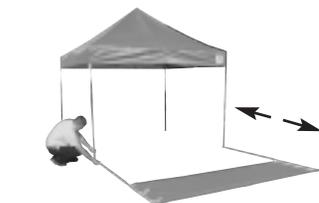

1. Position legs perpendicular to those of the Instant Shelter® where the sliders were installed.

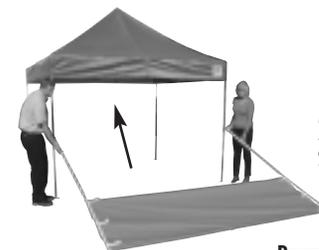

2. With partner, elevate outer legs of Sky Banner™ up to sliders.

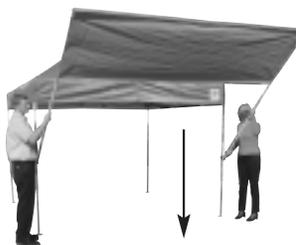

Snap Button




Snap Button

Sky Banner™ Outer Leg

1. Unfasten quick attachment straps that secure Sky Banner™ to Instant Shelter®. Rotate Sky Banner™ down until it rests on the ground.

2. Disconnect the Sky Banner™ outer legs from each slider by pressing both snap buttons and lifting.

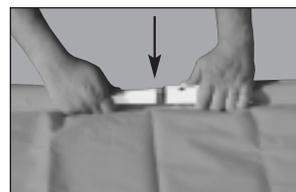

3a. Depress snap button where large and small diameter crossbar section meet and separate them by pulling them apart, keeping them inside sleeves.

Elevating The Sky Banner™

CAUTION! When elevating and taking down the Sky Banner™ make sure that you hold on to Outer Legs at all times. Unit will not stand by itself. Failure to do so could cause injury to user and damage to unit.



1. With 2 inch Velcro® strap in hand, lift Sky Banner™ into place with partner making sure its legs are parallel to the Instant Shelter's® legs.



2. Secure the Sky Banner™ to the Instant Shelter® by wrapping the 2" Velcro® straps tightly around both the Sky Banner™ and the Instant Shelter® legs. Position the Velcro® straps just under the bottom edge of the Instant Shelter® top for added stability.

Taking Down The Sky Banner™