



INSTRUCTIONS FOR FRAME CONNECTOR KIT

What's in the Kit Box: (2) Frame Connector Kits, (4) Thick Adapters, (4) Thin Adapters


Attach two or more frames together in an instant! Make sure the shelter is fully opened and elevated to the desired height.

Depending on which model shelter you own, you may need to install one of the included adapters in both Frame Connector bracket assemblies based on the chart below.


		Eclipse™ II	HUT™ II	Enterprise™ II	POP™ II
No Adapter:	●	●	○	○	○
Thin Adapter:	○	○	●	○	○
Thick Adapter:	○	○	○	●	○

(Note: not for use on Hex frames.)


Note: Opposite Locking Pins are located in inverted positions as shown.

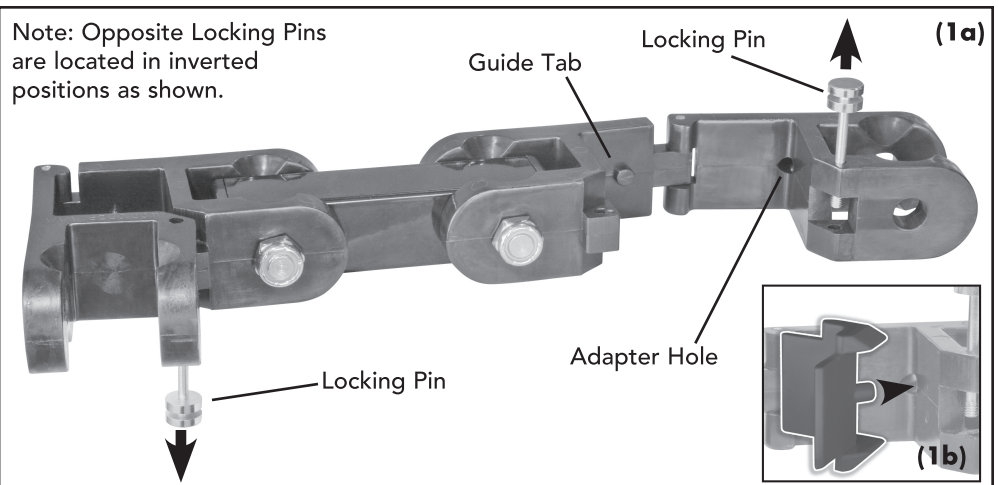

Step 1. (1a) Open the fixed corner bracket by lifting and/or pulling locking pin and opening the jaws. (1b) If required, insert the center plug of the appropriate adapter into the adapter hole on the bracket. Press firmly into place.

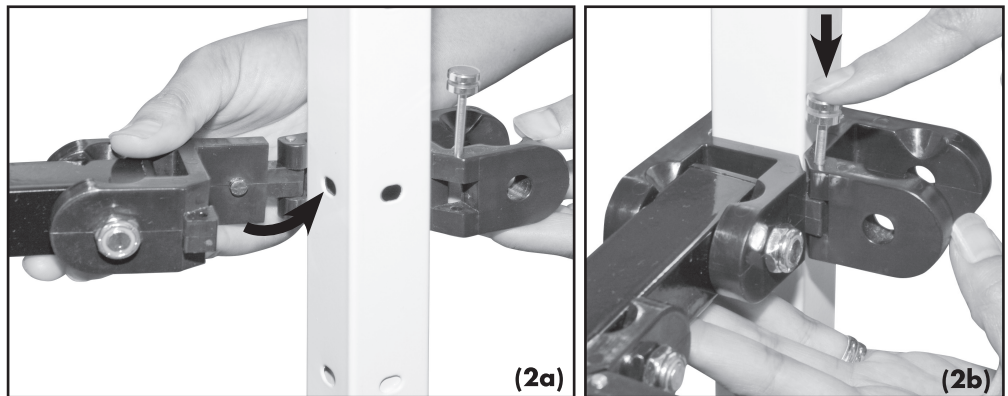

Step 2. Locate the mounting hole in the shelter leg approx. 3" above the frame toggle. (2a) With the bracket open and locking pin released, wrap bracket around the leg and insert the guide tab on the bracket into the hole of the leg. (2b) With the tab securely in place, continue wrapping the bracket fully around the leg and push the locking pin into secure.

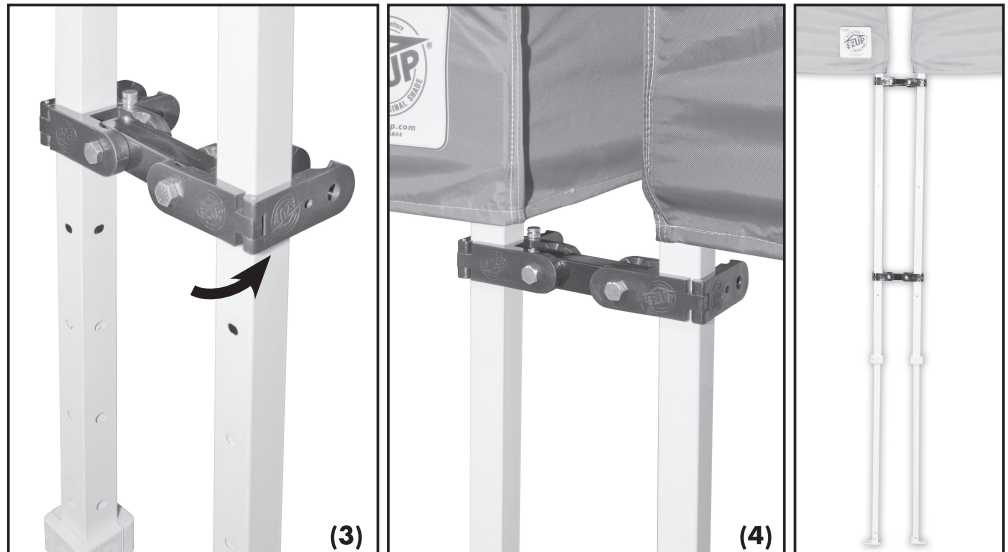

Step 3. Place the additional shelter(s) next to the original, so that the legs are lined up. (Note: Shelters must be set at the same height.) Wrap the open bracket around the new shelter leg as instructed in Step 1. and Step 2. in order to connect the two shelters.

Step 4. Attach the second Frame Connector to both legs just under the valance following Steps 1. and Step 2.

Note: No adapter is needed for this step.

INTERNATIONAL E-Z UP, INC.
1900 Second Street, Norco, California 92860 USA
Phone (951) 279-0999 • Fax (951) 279-0888 ezup.com
800-45 SHADE
800-457-4233