











## WHAT'S IN THE BOX

Your **Wedge™** product includes: **Wedge™** product, carry bag, and **spikes**.

## SET UP





**NOTE:** To prolong the life of the **Wedge™** product, select a leveled site clear of rocks, branches, and other hard or sharp objects.

1. Lay the **Wedge™** product flat with **Auto-Lock Hub** upright. Make sure poles are fully extended and spread out. (Fig. A)
2. Once the **Wedge™** product is laid out, the front 2 poles must be "locked" before set up. Lift up the **Auto-Lock Hub** as shown, (Fig. B1) extend and lock the front 2 legs. (Fig. B2) To lock, push the small leg into the larger leg until you hear a light "click". Repeat on both front legs. (Fig. B3)
3. Standing behind the **Wedge™** product, pull the two **paracords** up and then away from each other (left and right). (Fig. C)
4. Continue to pull the **paracords** until the upper and lower sections of the **Auto-Lock Hub** connect. As the **Auto-Lock Hub** gets closer to connecting, the resistance will increase and the body of the **Wedge™** product will form. (Fig. D)
5. IMPORTANT! Once the **Auto-Lock Hub** is in place, tie the **paracords** into a small bow. This will help to prevent the possibility of the **Wedge™** product accidentally collapsing. (Fig. E)
6. For safety and stability, we have provided **spikes** for the corners of the **Wedge™** product when used on grass and attached **sandbags** that should be filled with sand when used on the beach. (Fig. F)

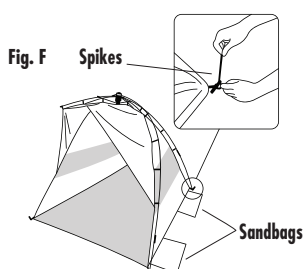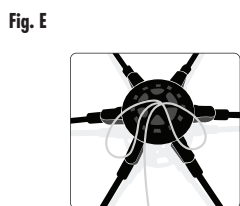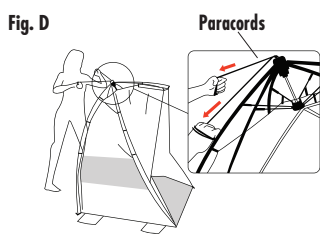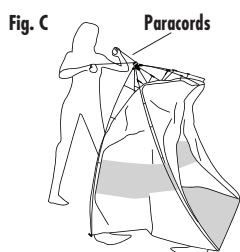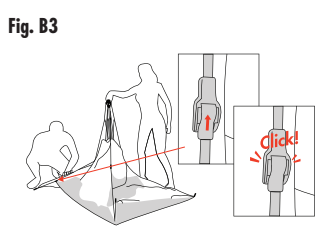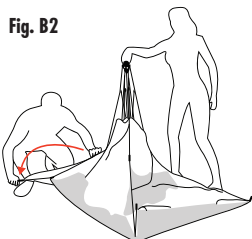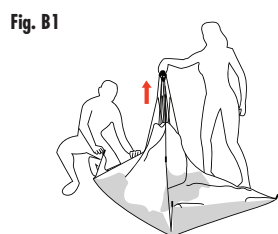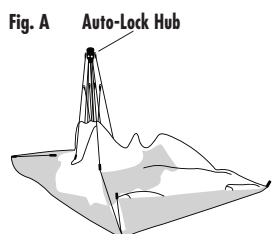


## TAKE DOWN

1. Untie the **paracords** and separate the **Auto-Lock Hub** by pushing down on the lower **Auto-Lock Hub** poles. The poles are marked by a sticker that says "PUSH HERE". (Fig. G)
2. Gently lower down the **Wedge™** product. (Fig. H)
3. Unlock the joints by pulling out the shorter leg and fold the bottom 1/3 poles onto themselves. (Fig. I)
4. Holding the **Auto-Lock Hub** upright, fold fabric and poles inward towards the **Auto-Lock Hub**. (Fig. J)

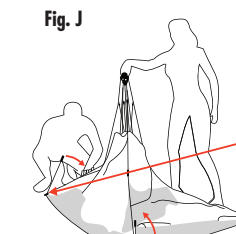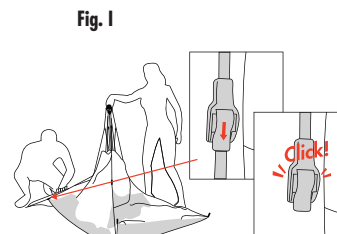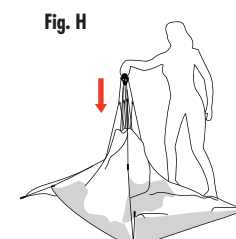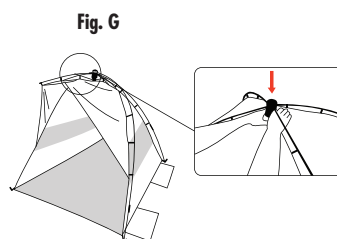

## PACKING

1. Fold the poles as shown.
2. Lay the **Wedge™** product on its side. Gather all poles tightly to the **Auto-Lock Hub** to prevent pole damage.
3. Bring all excess fabric together and roll tightly towards the **Auto-Lock Hub** (Like closing an umbrella)
4. Use provided strap to tightly tie the rolled **Wedge™** product.
5. Place the **Wedge™** product in the storage bag for extended storage.

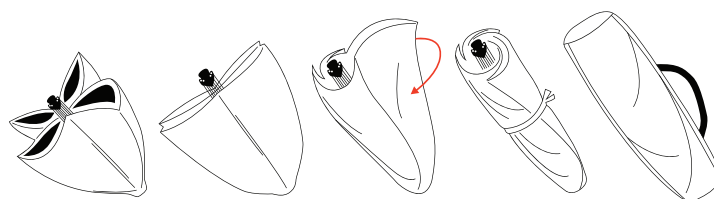

Warranty Information: [www.ezup.com/warranties](http://www.ezup.com/warranties)

### WARNING!

Always weigh down your E-Z UP® product. Do not leave your E-Z UP® product unattended. Do not depend on Weight Bags to secure product in heavy winds. For your safety, stake your E-Z UP® product down in any potentially windy or rainy weather.