# FOLDING THE BENCH

To fold the bench. Retract each of the 2 legs as shown in Fig 1 opposite. Then lower the bench (Fig. 2) slowly and lay to rest once in the down position.





Note: Before lowering bench ensure that all drawers are locked in position.

Fig. 2

### IMPORTANT INFORMATION

IMPORTANT! Read this information before proceeding. It is the user's responsibility to take the following precautions at all times.

- Your E-Z UP<sup>®</sup> Instant Work Bench<sup>®</sup> must be affixed to a secure wall before use. You must also ensure that you have used all of the mounting hardware suggested in this manual.
- Secure fitting is essential to the success of the unit and your safety.
- The E-Z UP® Instant Work Bench® is designed to withstand payloads of up to 250lbs.
- Always use caution when assembling your unit. Use care when locating any moving

## CARE AND MAINTENANCE

For long lasting durability and the best possible protection for your E-Z UP® Instant Work Bench®, follow these E-Z care and maintenance instructions:

- Use a mild soap (not detergent) and plenty of water for top cleaning.
- Frame will operate and look better if occasionally wiped with silicone spray.
- Slightly tighten bolts if frame becomes loose.

For online warranty, service, parts and accessories are E-Z as 1-2-click, contact us at

Ask about our other E-Z UP® Instant Products"

### 1 YEAR

INTERNATIONAL E-Z UP, INC., manufacturer of the E-Z UP® Instant Work Bench®, warrants to the original purchaser who provides a dated sales receipt, each part of the E-Z UP® Instant Shelter® to be free from defects in material or workmanship for a period of one year after the date of original purchase. The É-Z UP® Instant Work Bench™ frame is covered under a limited one year warranty and guarantees the frame to be free from defects in material or workmanship. This warranty applies only for normal and expected uses, as determined by the manufacturer.

INTERNATIONAL E-Z UP, INC.'s obligation and liability under this warranty is limited to the repair or replacement (at its option) of the product or its parts, after its own review and examination.

RETURN ADVISORY - Before returning any part or product to INTERNATIONAL E-Z UP, INC. or its designated representative, please phone or write to obtain specific return shipping instructions. All shipping costs must be prepaid, and INTERNA-TIONAL E-Z UP, INC. is not responsible for products damaged in transit.

CONDITIONS - This warranty shall be void as to any product which has been altered or modified in any manner. This warranty does not apply to damages caused by neglect or misuse, or other forces of nature, not to accidental or deliberated damage of the product, nor to use of the product that does not conform with the product instructions.

This warranty is provided in lieu of all other warranties, expressed or implied.

## We Make Life E-Z!™ INTERNATIONAL E-Z UP, INC.

1650 Iowa Avenue Ste. 200, Riverside, California 92507 Fax (909) 426-0063 www.ezupdirect.com Customer Service Hot Line

(800) 742 3363



"Sets Up in Seconds!™"

5' INZIANINOLKHEM

> Take time to learn how to provide years of durable and safe use from your E-Z UP® Instant Work Bench®. After reading these instructions carefully, if you have any need of assistance, call our Customer Service

# Department.



**Customer Service Hot Line** (800) 742 3363 www.ezupdirect.com


# WHAT'S IN THE BOX

# Please read each step before you attempt to set up. Save these instructions for future reference.

Instant Work Bench

- Peg Board Hooks
- 4 x Legs with Mounting Hardware
- Mounting Screws, Molly Anchors, Peg Board Bolt Fastener

# **IDENTIFY YOUR PARTS**

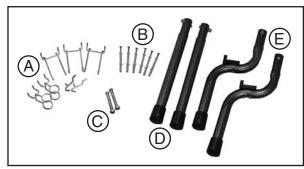

- A Peg Board Hooks
- D Front Legs
- B Mounting Screws & Moly-plugs
- E Rear Leas
- C Peg Board Bolt Fastener x 6

\*NOTE: If any of the Parts are missing please call to obtain your parts at no-charge. The Store unfortunately will not be able to source your missing parts.


**Customer Service Hot Line** 

(800) 742 3363 www.ezupdirect.com

# Tools You'll NEED




## HOW TO SET UP

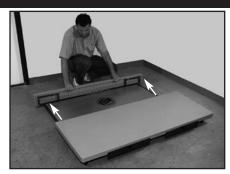

- **1.** Remove all outer/internal packaging from your E-Z UP Instant Work Bench®. Lay the unit on the ground. Position yourself at the top of the unit. With both hands, gently and firmly pull the Peg Board out of the unit. Stop when locating holes can be lined up with the frame.
- 2. Using the Nut & Bolts supplied (C), secure the Peg Board in Place. Be sure to tighten securely. Repeat Step for each side of unit.



3. Locate the black plastic leg handle. Pull the leg upwards until you hear the leg snap button locate. Repeat Step for remaining leg.

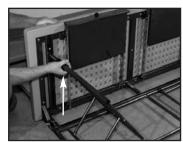





4. Affix legs using parts (D & E). As shown above. Repeat for each corner and be sure to affix securely with Nut/Bolt hardware supplied already positioned in leas.

5. The unit is now fully open and can be stood in the upright position. The next task is to affix the unit to the wall. There are 2 options of securing the unit to the wall. In the mounting kit provided (B), you may either affix directly into a wall stud (using a stud locator) or by using



the Molly Anchor provided directly into the Dry wall using a (1/4") Drill for Molly Anchor hole). Mark the studs using an erasable line. If using Molly Anchors line the unit against the wall and note the height of the two mounting rails as pictured below in 6.





6. There are 2 affixing areas, the top and bottom rail as shown above. Using your markings as instructed in 5, line up the bench to your desired area and proceed to use the mounting kit screws (B) provided and screw securely to the wall. 4 of the Mounting Screws from the kit will provide ample stability and ensures safe and secure use of your E-Z UP Instant Work Bench®.

# OTHER FEATURES

• Your E-Z UP Instant Work Bench® is also equipped with 2 sliding drawers and drawer dividers. Before placing the unit in the down position please check that the drawers are locked in position. This will ensure that the drawer contents remain in place.



2. Your E-Z UP Instant Work Bench® is equipped with a 36" Light and single power outlet ideally situated for power tool use.

(Light shown may differ from actual model fitted) .

